

BlueWave® MX-275 Glass Window Replacement Instructions

- 1. Before starting, disconnect power to the unit.
- 2. Lay the emitter on its side. Using a Phillips #1 screwdriver, loosen and fully remove the two screws (Figure 1).
- 3. Remove the glass retaining plate, then the old glass window and o-rings. (Figure 1).

NOTE: If the old glass window has shattered, be sure to remove all debris before attempting to install the new glass window.

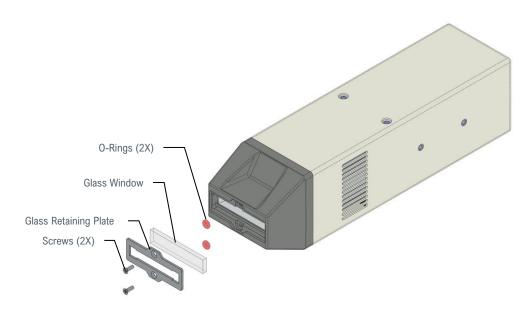


Figure 1. Removal of Glass Window

- 4. Wearing vinyl or cotton gloves, unwrap the new glass window and carefully clean it with the enclosed alcohol swab. Take care not to touch the glass window with bare hands, as any residue left on the window can adversely affect the performance of the unit.
- 5. Holding the window by its sides, lay it into the emitter's window pocket. Make sure the window is between the o-rings (supplied) as shown in Figure 2.

6. Reversing steps 2 & 3, reinstall the glass retaining plate, insert the two screws, and tighten.

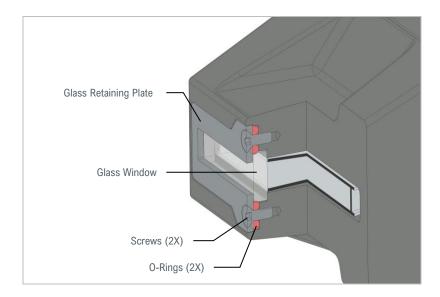


Figure 2. Cut-a-Way of Glass Window Pocket, All Parts Installed

www.dymax.com

Americas

USA | +1.860.482.1010 | info@dymax.com

Europe

Germany | +49 611.962.7900 | info_de@dymax.com | Ireland | +353 21.237.3016 | info_ie@dymax.com

Asia

Singapore | +65.67522887 | info_ap@dymax.com Shanghai | +86.21.37285759 | dymaxasia@dymax.com Shenzhen | +86.755.83485759 | dymaxasia@dymax.com Hong Kong | +852.2460.7038 | dymaxasia@dymax.com Korea | +82.31.608.3434 | info_kr@dymax.com